


01

When the blue light is flashing:
The charger is available, and
waiting to be connected



03

Then open the charging socket
lid on the wallbox and plug in
the charging connector.

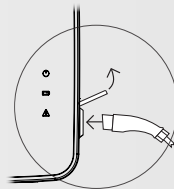

05

Hold a valid RFID card or phone App
in front of the RFID module on the
housing cover. When the green light
flashes, the car is charging.



07


If the red light flashes, or steady,
an error has occurred - Try again.
If the error continues please call
our support.



How to charge your car with an IP Innovative Power charger

02

Open the charging inlet of the
vehicle and plug in the
charging connector.

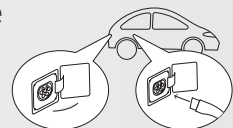

04

When the blue light is steady:
The car is ready for charging.



06

When the charging procedure is
paused or completed, the green
LED is again continuously ON.



Support: +49 30 92371399
supportev@ipinnovativepower.com